

Registered office:

Caleb Components Limited,
Block 6 Grazebrook Industrial Park
Peartree Lane
Dudley
DY2 0XW
UK

Tel: 0044 (0)1384 453955

Email: sales@calebcomponents.com

Shop Online: www.springfasteners.co.uk



How to install an Internal Circlip...

Here is some helpful information when it comes to fitting Internal Circlips.

Firstly, make sure you have the correct size of Internal Circlip.

Internal Circlips are always listed by the **bore** size they are fitting in to. For example, a 20mm Internal Circlip will suit a 20mm bore. Alternatively, measure from the outside edge of the circlip to the inside edge of the circlip – be sure measure on the widest part of the circlip. For example, if you have a measurement of 12mm, you will require a 12mm Circlip.

Next, ensure you have suitable [Internal Circlip Pliers](#) that will fill into the holes of the circlip.

Once the pliers are firmly in the holes of the Circlip, squeeze the Circlip so it contracts to the size required.

Guide the Circlip into the bore and ensure it fits securely **into the groove** of the bore.

When it comes to removal of the Internal Circlip, again use an Internal Circlip Plier, and insert into the holes of the circlip. Gently squeeze the plier handles to contract the Circlip and remove from the groove of the bore, and then remove from the bore.

Require further assistance? Feel free to get in touch using the contact details above.

